


GHMF Wave Vales

Individual Valve Control

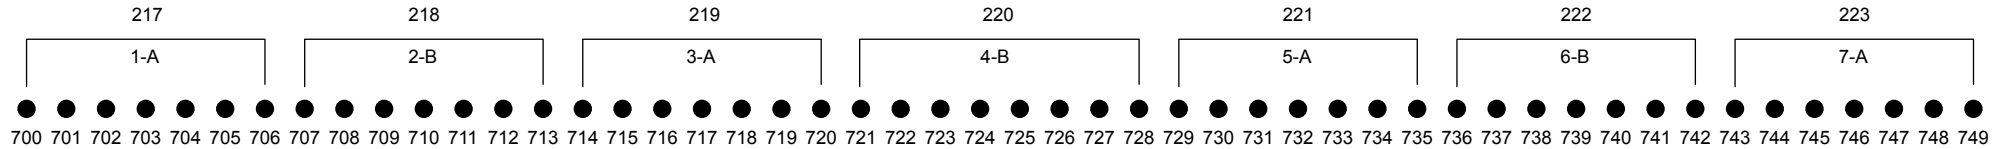

7xx-001 = On

7xx-000 = Off

Example: Open the first and last vale of Module 3.

1. In the software, go to the time marker you want the vales to turn on, then tap W
2. Enter the valve number like this: 714-001, 720-001

When controlling individual valves, you are responsible for turning them on and off. If you have individual vales on, and then call a normal wave function, the individual valves will be canceled out.

If you have several vales up and quickly want to turn them all off, use the All - Off function in the Wave Setup rather than entering several individual off commands.